Installing KDDI Kyocera A5521K Speaker

Written By: Dominic Grisafe

TOOLS:

- Plastic Opening Tools (1)
- Spudger (1)
- Thumb Tack (1)
- Tweezers (1)
- Y0 screw driver (1)

SUMMARY

These instructions will demonstrate how to remove the speaker from the KDDI Kyocera A5521K.

Step 1 — Battery

- Turn the phone over to expose the battery cover.
- Apply pressure to the back of the battery cover to slide it down.
- The battery cover is now separate from the phone.

Step 2

- Remove the battery by pushing it up and out from the bottom.
- The battery, cover, and phone should now be separated.

Step 3 — Faceplate
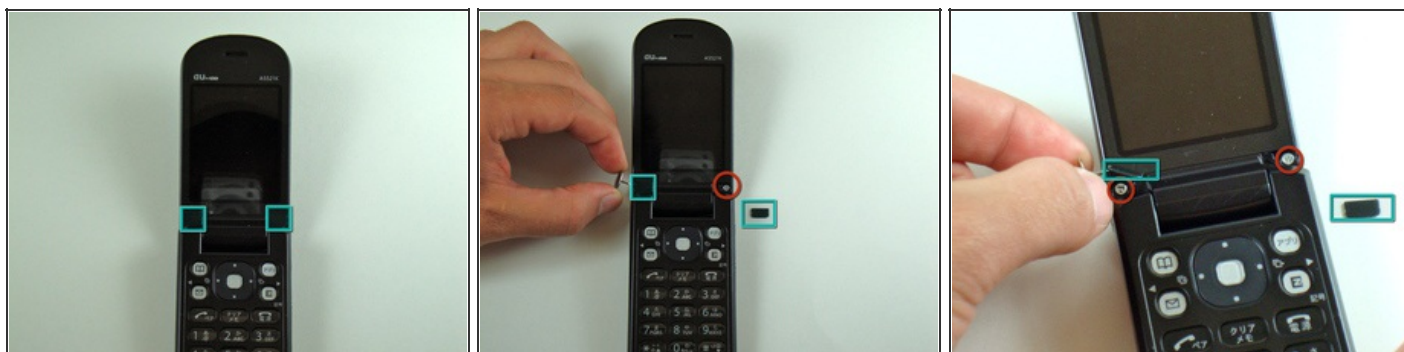
- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
  - Beneath the covers are screws.

Step 4

- Remove the screws using a Y0 screwdriver.

Step 5

- Use the iPod pry tool to remove the outer screen.
  - Two screws are now visible.
  - Be careful not to crack the screen upon removal. It is adhered strongly to the phone.

Step 6

- Use the Y0 screwdriver to remove the screws.

Step 7

- Use the iPod pry tool to loosen the faceplate from the phone.
  - Slide the pry tool along the entire crease of the faceplate to completely detach it.

Step 8

- Separate the faceplate from the phone.

Step 9 — Speaker
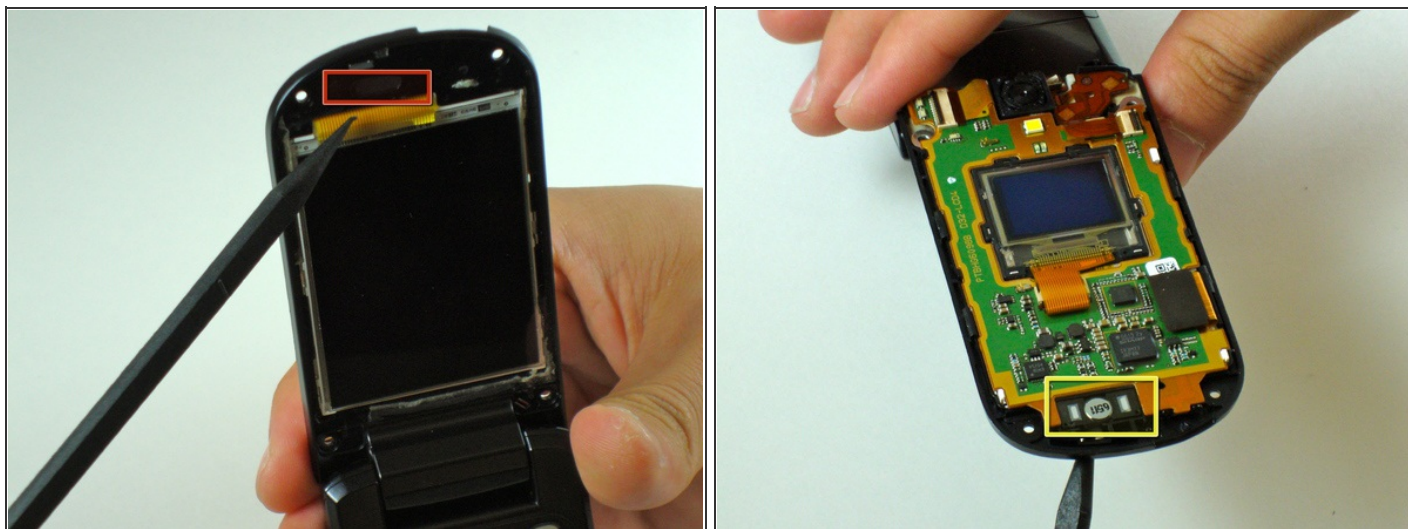
- Turn the phone over.
- Place a spudger in the oval shaped speaker opening of the phone (indicated by the red rectangle).
- Turn the phone so the exposed circuit board faces upward.
  - Keep the spudger in the speaker while turning the phone.

  - The speaker is indicated by the yellow rectangle.

Step 10
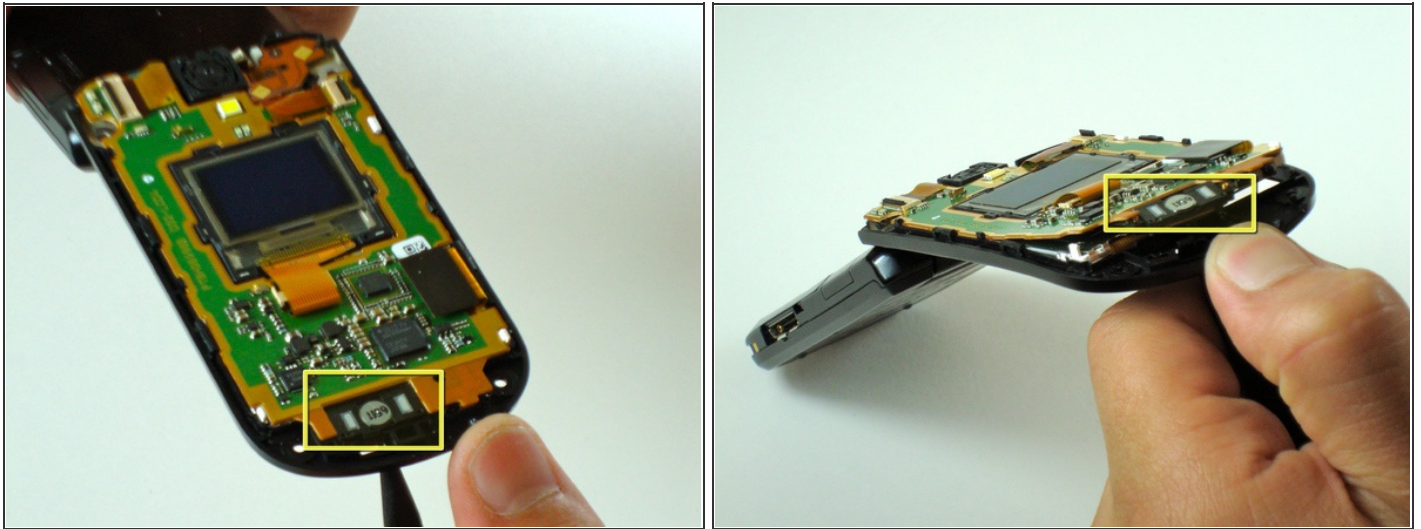
- Push the spudger through the speaker opening to separate the speaker (indicated by the yellow rectangle).

Step 11
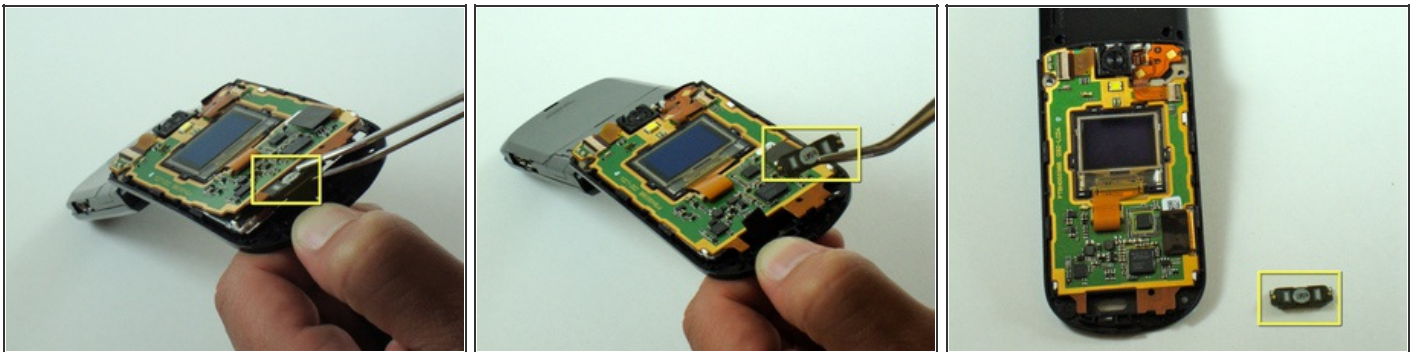
- Grasp the speaker (indicated by the yellow rectangle) with tweezers, or with your fingers if you can manage a firm grip.
- Firmly remove the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2012-10-30 10:52:14 PM.